



**INSTALLATION AND ASSEMBLY INSTRUCTIONS**

Please study these instructions carefully before assembling your harness connectors. If you have any questions, contact our **Technical Hotline at: 1-800-416-8628**, 7 am to 5 pm, Monday-Friday, Pacific Standard Time or e-mail us at **QD2@edelbrock.com**.


**SUGGESTED CRIMP TOOL FOR SWITCHCRAFT CONNECTORS PART # PA1440 MANUFACTURED BY PALADIN TOOLS. SUGGESTED CONTACT INSERT AND REMOVAL TOOL : RADIO SHACK PART # 276-1426 D-SUB INSERTION AND EXTRACTION TOOL.**

**SENSOR  
CONNECTOR  
#91221**


CONNECTOR DETAILS	
1	GROUND
2	SIGNAL +
3	5 VOLTS
4	12 VOLTS

**HARNESS  
CONNECTOR  
#91200**

PIN VIEW

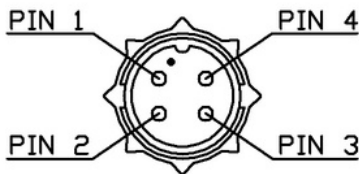


SOCKET VIEW

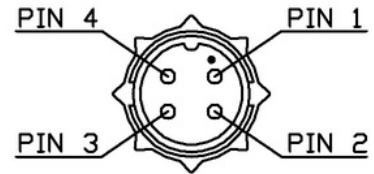

WIRE VIEW



WIRE VIEW

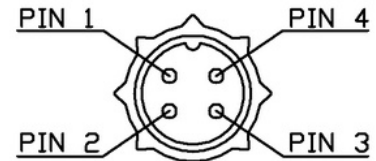

**SWITCHCRAFT CONNECTOR ASSEMBLY INSTRUCTIONS:**

CRIMP CONDUCTOR TO CONTACT, PLACE CRIMPED CONTACT AND CONDUCTOR ONTO HAND TOOL AND INSERT INTO CONNECTOR HOUSING UNTIL BOTTOMED. TO REMOVE CONTACTS, INSERT TOOL INTO CONNECTOR HOUSING FROM CONDUCTOR SIDE UNTIL TOOL BOTTOMS IN HOUSING, PLACE CONDUCTOR IN SLOT OF TOOL, ROTATE TOOL CLOCKWISE AND REMOVE FROM HOUSING.

**Edelbrock LLC • 2700 California St. • Torrance, CA 90503**  
**Tech-Line: 1-800-416-8628 • E-Mail: QD2@Edelbrock.com**